

USING THE CHRYSLER AUTOMATIC TRANSMISSION DIPSTICK

For measuring only – not to be left in place permanently.

Measure the fluid level with the engine idling in Park.

Insert the dipstick until it stops (the red handle will still be some distance away from the top of the dipstick tube).

Remove dipstick to check the fluid level.

Cold: fluid level should be between the two '25' markings on the black scale.

Hot: fluid level should be between the two '80' markings on the black scale.